

Product Information EO Ring Cord

Ellipse O-Ring Cord

EO Ring with ellipsoidal cross-section can be arranged for any length & size you want !!!







EO Ring Code

EO Ring Kit

"EO Ring Code" has been developed as the ideal sealing material, based on our research through a leak testing. Cross section of "EO Ring Code" is ellipsoidal, which allows more margins to squeeze than O-ring. Due to that extra margin, a spacer can be installed between WORK and surface of jig in order to prevent a heat exchange. Also, its great effectiveness remains even when a spacer not used.

"EO Ring Code" is string-shape and 3-meter long, can be arranged in any length required and just glue to use.


"EO Ring Kit" is user-friendly and handy tool as everything required is just ready for you!!!


Feature 1 **Enhanced Seal Ability**

- Ellipsoidal shape allows more squeeze. margins to Enhances seal ability
- Hardly come off from groove and can be used in relatively small seal area.

Feature 2 **Less Heat Exchange**

- Spacer (stopper) can be arranged between WORK and jig.
- Spacer allows heat insulation between WORK and jig. That leads less heat exchange and stable measurement.

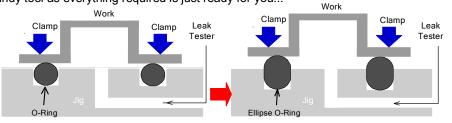

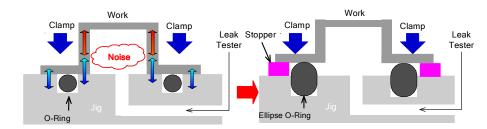

Feature 3 Cost-Friendly Kit

- As "EO Ring Code" can be arranged in a complex shape, mold or specialized packing no longer necessary. Even when creating O-ring in a mold, EO Ring is ideal tool for trial.
- "EO Ring Kit" allows flexible shape of O-ring with reasonable price

EO Ring Code Specification

Cross Section	
Size	W 2.6 × H 3.5(mm)
Material	NBR
Hardness	JIS A 60°
Color	Black
Length	3.0m
Dimension	
Tolerance	JIS 2401B Equivalent±0.15mm

Components of EO Ring Kit (EK-10)

Cutting Jig 1 piece
Glue jig 1 set
Glue 1 piece
Cutter 1 piece
EO Ring Code 2 pieces

**Contents of this document is correct as of Jun 2009. Please note that all information is subject to change without any notice.

COSMO INSTRUMENTS CO., LTD.

2974-23 ISHIKAWACHO HACHIOJI, TOKYO 192-0032 JAPAN Phone: 0426-42-1357 Fax: 0426-46-2439

http://www.cosmo-k.co.jp/

China COSMO (SHANGHAI)TRADING CO.,LTD U.S.A. COSMO SOLUTIONS TECHNOLOGY,INC. Korea COSMO KOREA CO., Ltd Taiwan DIAFRIEND CORPORATION

Taiwan DIAFRIEND CORPORATION
Malaysia WAVE ELECTRONICS & ELECTRICAL SYSTEM SDN. BHD
Thailand COSMOWAVE TECHNOLOGY CO., Ltd.
Indonesia Wave Electronics & Electrical System Sdn. Bhd Indonesia
Vietnam COSMOWAVE TECHNOLOGY CO.,LTD. Vietnam
India COSMOWAVE TECHNOLOGY CO.,LTD. India Liaison Office
Australia INDUSTRIAL RESEARCH TECHNOLOGY PTY. Ltd.
England FLETCHER-MOORLAND Ltd.

Phone: +86-(0)21-6575-6880 Phone: +1-248-488-2580 Phone: +82-(0)32-623-6961 Phone: +82-(0)32-623-6961 Phone: +866-(0)2-27121050 Phone: +60-(0)3-51626677 Phone: +66-(0)2-7361667 Phone: +62-(0)21-42900043 Phone: +84-(0)47876085 Phone: +91-(0)124-4210946 Phone: +61-(0)3-9469-6888 Phone: +44-(0)1782-411021